

WAX MOTION LAMP

- * THIS IS NOT A TOY; KEEP OUT OF REACH OF CHILDREN AND PETS.
- * ALWAYS TURN OFF PRODUCT WHEN LEAVING THE HOUSE OR WHEN RETIRING FOR THE EVENING NEVER LEAVE UNATTENDED.
- * DO NOT EXPOSE TO MOISTURE OR USE IN A WET OR DAMP ENVIRONMENT.
- * NEVER TOUCH ELECTRICAL ITEMS WITH WET HANDS.

Cautions:

1. **Lamp is extremely hot when in use.** When operating the lamp never attempt to touch, move or shake it as the contents are hot and could cause personal injury and permanent damage to the lamp.
2. Motion Lamp should never be heated up by any other means, nor should it be cooled down artificially, nor be used when the vase is cracked or damaged.
3. Before moving the lamp, please check to see that the wax layer is completely flat and solidified.
4. The space on the top of vase is provided for expansion. Do not break the seal of cap to fill it with liquid or solid. Breaking the seal will void your warranty and ruin the product.
5. Use only specified bulb for replacement bulb. Variance in bulb size or wattage will produce unsatisfactory operation, fire or breakage of the glass vase.
6. The lamp bulb and reflector may be off center during shipping. Please recenter them before plugging the lamp.
7. Long period storage should be handled carefully without freezing or overheating which may permanently damage the product. Always use the original box to store Motion Lamp.
8. DO NOT INGEST, WARRANTY VOID IF OPENED.
9. **SURFACE IS HOT WHEN IN USE;** keep out of reach of children and pets.

 
Operations:

1. Motion Lamp is designed to operate in an average room temperature 20-25°C(68-77°F). It takes 2-3 hours for Motion Lamp to warm up. Make sure Motion Lamp is at room temperature before starting.
2. Keep Motion Lamp from sources of cold or warm air such as heating and air conditioning vents.
3. Motion Lamp operates at a very hot temperature with glass vase. Place it on a solid stationary flat surface and operate out of reach of small children and pets and away from combustibles. Avoid direct sunlight to prevent fading of colors or extreme overheating.
4. The color hue of the wax will mellow after 2-3 runs of operation. If the room temperature is high, wax shape may become small and float on top of the vase due to overheating. If the temperature is low, it will stay in the bottom of vase without floating. Wait until room temperature is back to the designated range before restarting.
5. Use only a fine glass cleaner and a soft rag to clean the surface. Always unplug lamp and allow to cool down before cleaning.

Light Bulb Included. SURFACE IS HOT WHEN IN USE.

To replace burnt out light bulb:

1. Unplug the unit from main power source.
Wait one hour until the unit has cooled to room temperature.
2. Lift the bottle according to the drawing.



Use only E17, R39, 30W bulb  for replacement bulb.

Using the wrong wattage or type of bulb could cause a fire.

“For Household/Residential use only.”

IMPORTANT SAFETY INSTRUCTION

When using an electrical furnishing, basic precautions should always be followed, including the following:

Read all instructions before using this furnishing.

DANGER – To reduce the risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never operate the furnishing with the air openings blocked. Keep the air openings free of lint, hair, and the like.
7. Never drop or insert any object into any opening.
8. Do not use outdoors.
9. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
10. To disconnect, turn all controls to the off position, then remove plug from outlet.

SAVE THESE INSTRUCTIONS