


# NEON MARTINI OLIVE MIRROR

## Assembly Sheet

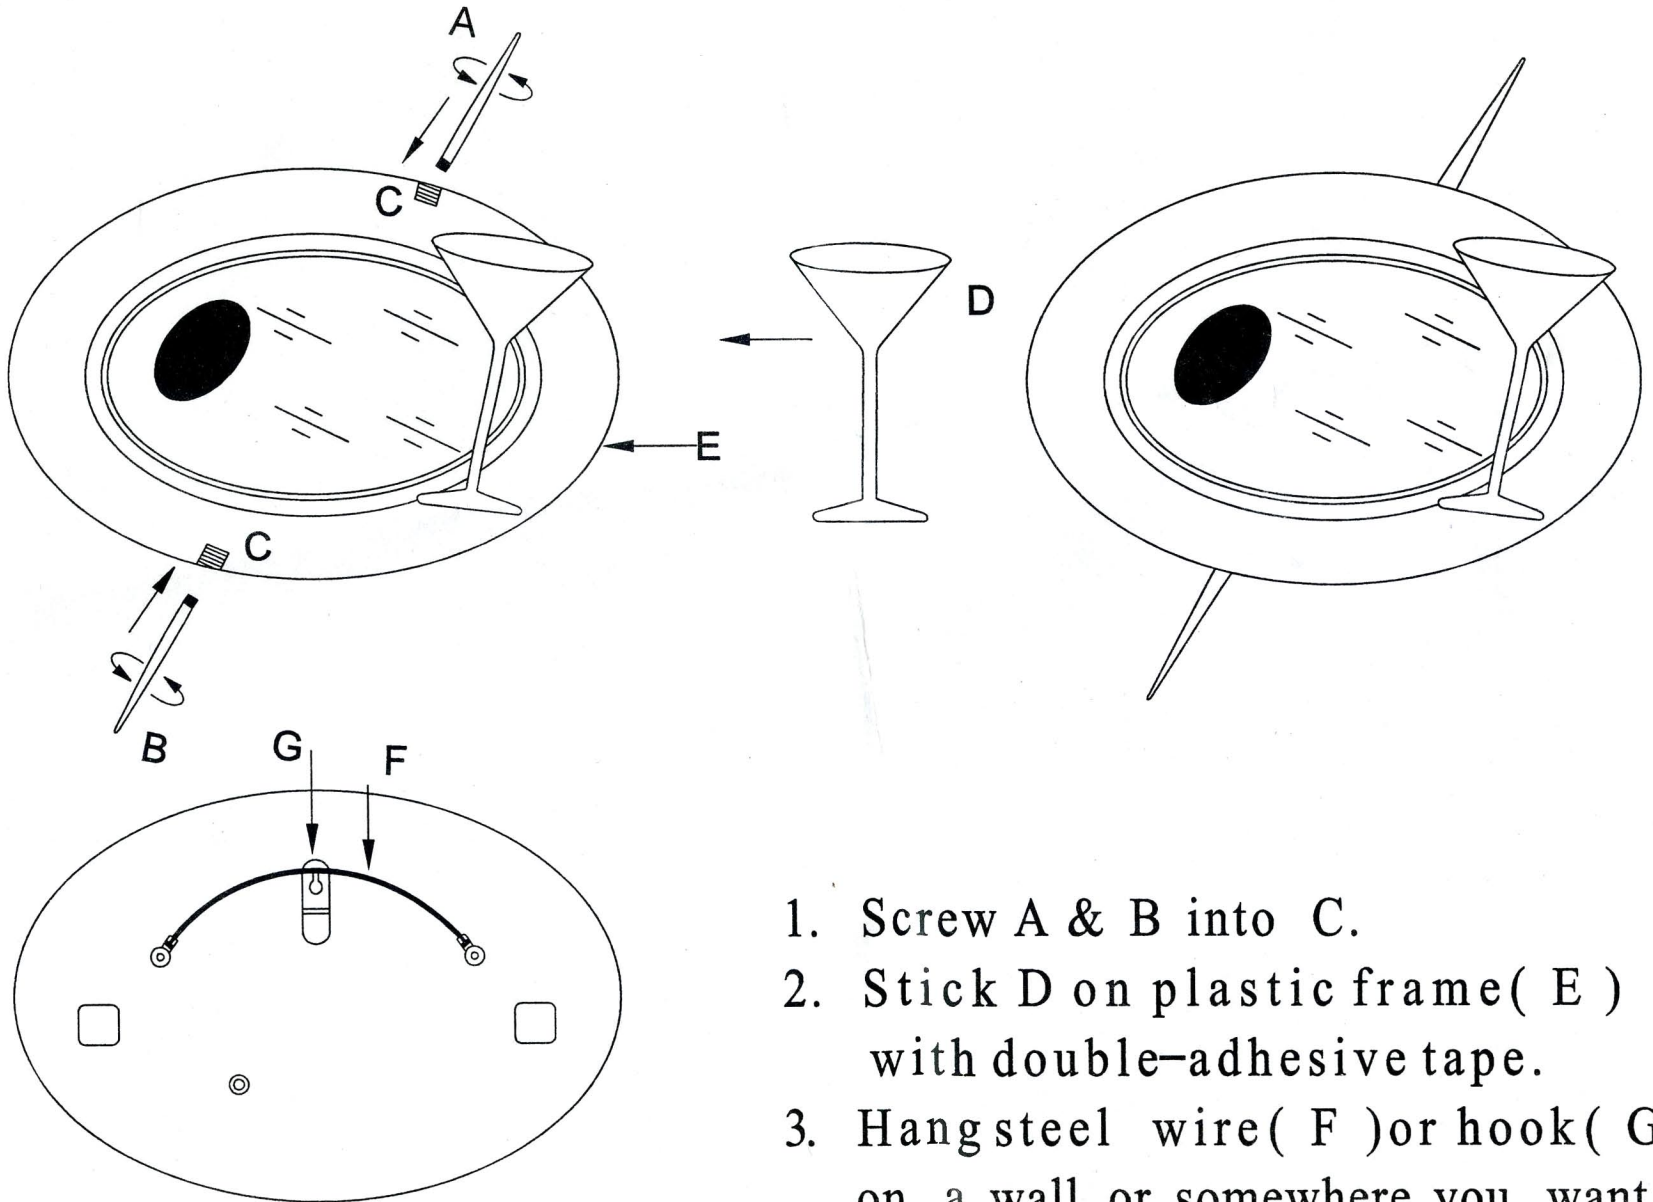

1. Screw A & B into C.
2. Stick D on plastic frame( E ) with double-adhesive tape.
3. Hang steel wire( F ) or hook( G ) on a wall or somewhere you want.